

## Owners Manual/Operating Instructions and Spare Parts Manual

### INTRODUCTION

Lift-Rite trucks are shop lift trucks, designed to lift and/or position small loads at an ergonomic height, such as stocking a shelf. Make sure to read all of the following instructions for safe operation of your truck. If you need further information or assistance, please use the information as noted in the footer on this document.

### DELIVERY INSPECTION

Visually inspect frame components and lifting mechanism for damage during shipment by carrier. If damage is evident, notify delivering carrier immediately and file necessary claims.

### SAFETY PROCEDURES

- Read and understand the contents of this manual prior to using this piece of equipment.
- Read and obey all labels on this product. If you have any questions about these, ask your supervisor.
- *Never* overload your Easy-Lift; stay within rated capacity.
- Do *not* operate truck if it has been damaged or is not in proper working order.
- Distribute the load evenly on the platform and within the specified load center.
- Only handle loads on flat level surfaces. Do *not* use a loaded truck on inclines or declines.
- *Never* put your feet, hands, or any other body part under the frame assembly.
- *Always* make sure that the load is stable before moving to eliminate opportunity for load shift.
- When not in use, platform should be fully lowered to avoid injury.
- Do *not* get oil or grease on the winch friction disc, as this could allow the load to slip or fall.
- Obey crank rotation decals and operating instructions.
- Do *not* use this lift as a personnel lift.
- Inspect cable, winch, and frame for excessive wear or damage before each use.
- A loud clicking sound from the ratchet *must* be heard when lifting load. *If a loud clicking sound is not heard, do not use.*
- *Never* release the crank handle unless the ratchet pawl is fully engaged and the load is supported.
- *Never* leave a weight hanging from the winch while the winch is unattended, as another person may attempt to operate the winch, thereby creating an unsafe condition.
- Move loads only with the platform in the fully lowered position.
- Failure to follow these safety procedures may result in property damage, bodily injury, and/or death.

### OPERATING INSTRUCTIONS

- Push or pull lift by firmly grabbing the loop handle with the platform in the lowered position.
- To LIFT a load, turn crank handle clockwise. The ratchet **MUST** make a loud clicking noise.
- To LOWER a load, turn crank handle counterclockwise. No clicking will be heard because the brake system is activated.

### MAINTENANCE

- Do *not* get oil or grease on the friction disks. This could allow the load to slip and fall.
- Maintain a film of automotive type grease on all gear teeth, and to the OD of drum bearing at all times.
- Keep ratchet pawl pivot, bushings, and pinion threads lubricated with automotive engine oil at all times.

### DAILY CHECKLIST

At the start of your shift, check the items listed below. Report any malfunctions or unsafe conditions to your supervisor. Do not use this product until it is repaired.

- Check cable, friction disks, and gear teeth for excessive wear.
- Check wheels and casters for excessive wear or damage, and remove debris.
- Excessive wear is an indication that the component requires replacement.
- Inspect fasteners for proper tightness.

---

## EASY-LIFT TRUCK WARRANTY

The Easy-Lift Truck is warranted against defects in materials and workmanship for a period of six (6) months from the date of installation.

Components found to be defective by an authorized Lift-Rite Sales and Service Center during the warranty period will be replaced or repaired as indicated above. Replacement components installed during the defined period set forth above, are warranted for the balance of the applicable truck warranty period, or 90 days, whichever is longer. Additionally, freight charges for parts involved in the replacement or repair of a defective component will be paid by Lift-Rite, provided that the replacement or repair is made by an authorized Lift-Rite Sales and Service Center. Labor or miscellaneous costs involved in the replacement of any components determined to be defective are not covered. Local taxes, if any, are excluded.

This warranty is void in the event of defects or damage caused by misuse, abuse, or accident.

This warranty does not cover oil leaks, adjustments, or loose hardware.

Lift-Rite reserves the right to make changes and improvements in design without making changes to previously manufactured vehicles.

Notwithstanding any other language contained herein, this warranty is expressly voided without any further notice if any modification is made to the Lift-Rite equipment, or if additional components or devices are added to the Lift-Rite equipment, without prior approval having been granted in writing by Lift-Rite.

**THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY. THERE ARE NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. In no event shall Lift-Rite be liable for incidental, special, or consequential damages.**

# LIFTRITE® Model ER-Easy — Easy-Lift

## EASY LIFT

Item No.	DESCRIPTION	Part No.	Qty.
1	FRAME ASSEMBLY	PE-6001	1
2	PLATFORM ASSEMBLY	PE-6002	1
3	TOP CROSS MEMBER	AE-6004	1
4	WINCH ASSEMBLY	PE-6003	1
5	3 IN. SWIVEL CASTER	PE-6006	2
6	BOLT	MI-HEC75Z	8
7	WASHER	PL-10232A	8
8	NUT	MI-NUTECZ	8
9	6 IN. WHEEL	PE-6005	2
10	WASHER	PL-10250B	2
11	COTTER PIN	MI-LOCKHZ	3
12	CARRIAGE ROLLER	PE-6011	4
13	BUSHING	PL-10203	4
14	WIRE ROPE	PE-6015	1
15	WASHER	PC-9085A	2
16	BOLT	MI-HCFIZ	3
17	FENDER WASHER	MI-FLATC1	2
18	WASHER	MI-LOCKFZ	3
19	NUT	MI-NUTFCZ	3
20	BOLT	MI-HDCIZ	2
21	WASHER	MI-LOCKDZ	2
22	NUT	MI-NUTDCZ	2
23	PULLEY	PE-6007	1
24	BEARING	PL-20206	1
24	SPLIT PIN	PM-20269	1
25	EYE BOLT PIN	PL-20227	1

