


## Hand Pallet Truck - Trouble-shooting

**Problem:** Truck not lifting

**Common Cause:** Air in hydraulic valve

**Remedy:** Procedure shown below

**IF THE PUMP DOES NOT  
LIFT NORMALLY PULL UP  
ON CONTROL LEVER AND  
HOLD WHILE PUMPING  
HANDLE SEVERAL TIMES.**

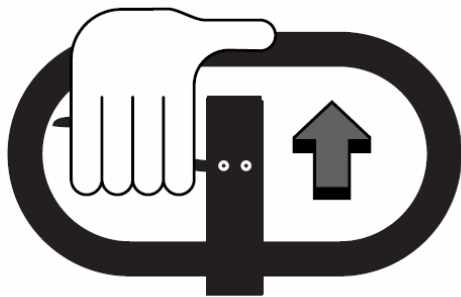

**THEN SET CONTROL LEVER  
TO PUMP POSITION AND  
PUMP HANDLE NORMALLY  
TO LIFT LOAD.**

