

55 Walker Drive, Brampton, Ontario, L6T 5K5
Phone: (905) 456-2603
Fax: (905) 456-1383


Hand Pallet Truck - Trouble-shooting

Problem: Truck not lifting

Common Cause: Air in hydraulic valve

Remedy: Procedure shown below

**IF THE PUMP DOES NOT
LIFT NORMALLY PULL UP
ON CONTROL LEVER AND
HOLD WHILE PUMPING
HANDLE SEVERAL TIMES.**

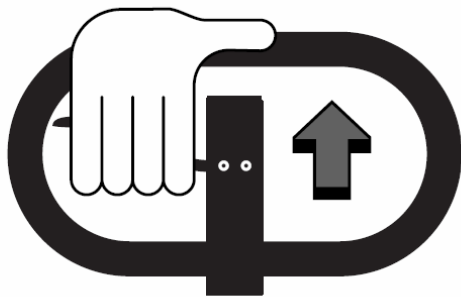

**THEN SET CONTROL LEVER
TO PUMP POSITION AND
PUMP HANDLE NORMALLY
TO LIFT LOAD.**

